

USER MANUAL



PURE SINE WAVE LIB INVERTER
250/500/600/850/1000/1500/2000VA

This page is intentionally left blank

ABOUT THIS MANUAL

Purpose

This manual describes the operation and troubleshooting of this unit. Please read this manual carefully before operations. Keep this manual for future reference.

Scope

This manual provides safety guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before operating your Pure Sine Wave Inverter, please review the safety precautions outlined in this manual to ensure safe and trouble-free operation. It is essential to follow these guidelines to prevent accidents and protect yourself and others from harm.

2. Do not disassemble the unit. Take it to a qualified service center when service or repair is required.

Incorrect re-assembly may result in a risk of electric shock or fire.

3. The inverter should be installed in a dry, well ventilated environment.

4. Do not expose the inverter to the heat, moisture, flammable, explosive, corrosive environment, dry cloth cleaning, and avoid water.

5. **CAUTION** – Only qualified personnel can install this device with battery.

6. Fuse/MCB is provided as over-current protection for the AC Mains supply.

7. **GROUNDING INSTRUCTIONS** -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulations to install this inverter.

8. **NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.

9. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following the troubleshooting table, please send this inverter back to the local dealer or service center for maintenance.

WARNING: FIRE HAZARD

Even if the inverter is switched off, there might be a spark when connected to a battery (powerful 1000W-2000W inverters create a strong spark). This is normal and caused by capacitors in the inverter circuit which require initial charging at connection. Once charged, reconnection of the inverter within a short time frame should not cause a spark again.



INTRODUCTION

Welcome to the user manual for your “**LiGEN Power**” Pure Sine Wave Inverter! This manual is designed to provide you with all the necessary information to effectively and safely operate your inverter. Whether you're using it for backup power during outages, in off-grid locations, or for any other application, this inverter offers reliable and high-quality power conversion with portable size.

Key Features

- Pure sine Wave Output: provides clean and stable power, suitable for sensitive electronics
- Light on Weight
- Ultra Long Life
- Maintenance Free
- No Fumes
- High Efficacy: optimized design for maximum energy conversion efficiency, minimizing energy wastage, Minimal no load current
- Overload/ Over temperature/ short circuit protection/Over & Under Voltage Protection: Built-in protection mechanisms to safeguard the inverter and connected devices from damage
- Fast Charging
- Automatic cooling fan operation.
- LCD Display for better user interface
- User-Friendly Interface: Intuitive controls and indicators for easy monitoring and operation
- Quiet Operation: Low-noise design for minimal disturbance during operation.

Starting Operation


- Connect the male and female XT 60/90 connectors on the back panel of the inverter. Plug the AC male top into the AC mains supply. Connect a load to the female socket located on the back panel of the Inverter.
- After connecting the XT 60/90 connector, a beep sound comes from the buzzer, and the status of the inverter starts to appear on the LCD.
- Press the power button or switch on the front control panel of the inverter unit to turn it ON. Once powered ON, the inverter will perform a self-check routine to ensure proper operation.
- Observe the LCD display on the control panel of the inverter unit. The LCD display provides valuable information about the operating status of the inverter, including power status, battery voltage, AC input and output status, charging current, load wattage, temperature (in Celsius), overload conditions, over-temperature conditions, and fault notifications.
- After powering ON, this system can run a load solely on battery power in the event of a power outage. When AC mains power is available, the inverter automatically switches to Normal mode without interrupting the load, simultaneously charging the battery. This transition is indicated by a clicking sound as the internal transfer relay changes position, and the LCD display shows the current status of the inverter
- When AC mains power is available, input power is directly transferred to the output. It doesn't matter if the power button is on or off. The power button is only for turning the inverter on or off during a power outage
- The system will begin to draw power from the batteries and use it to supply power to the load. The load will continue to operate uninterrupted in case of a power failure, provided the inverter power button is turned on. Otherwise, the load will be interrupted.

- Manual Bypass (Only for above 600VA model)
- Use the bypass mode as a temporary solution while addressing the inverter malfunction. Once the inverter is repaired or replaced, switch back to normal operation mode to utilize its full functionality.
- The above steps will complete the functional test of the Inverter. If all areas pass the system is ready for use. If something fails, figure out the reason before proceeding or contact the service center.


Note: When powerful appliances are connected to the inverter, the battery voltage drops more quickly, triggering a low battery shutdown sooner. This means that even after shutdown, there may still be power remaining in the battery. Conversely, lighter loads allow for deeper battery discharge before shutdown. It's important to consider connected appliance power requirements to optimize battery usage.

Product Overview

1. LCD display
2. ON/OFF Metallic Switch
3. FAN VENT
4. MCB/FUSE
5. 6A/16A Black Color Socket (AC Out)
6. AC IN (with 6A/16A Male Top)
7. XT 60/90 Male Female Connector
8. Manual Bypass Switch

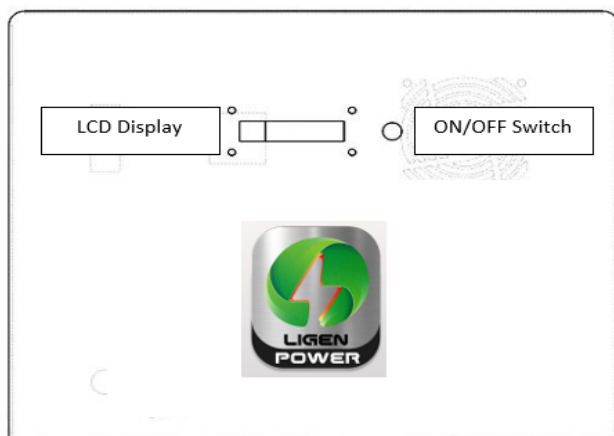

Front Panel

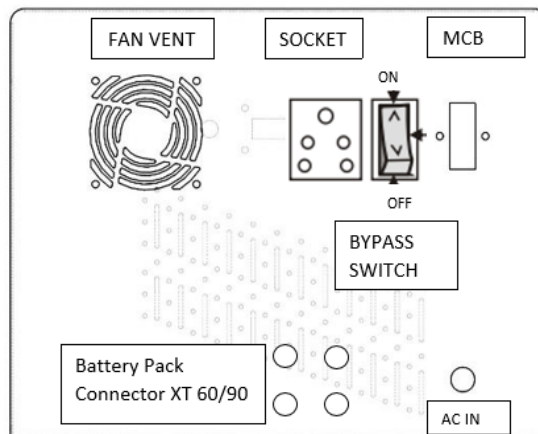

Back Panel

Maintenance

Maintaining your Inverter is a breeze as it requires minimal upkeep. Simply grab a damp cloth and wipe down the exterior of the unit from time to time to keep dust and dirt at bay. This simple routine helps ensure smooth operation and longevity for your inverter.

TROUBLESHOOTING

Problem	LCD/Buzzer	Possible Causes/Explanation	Solution
Unit shuts down automatically during the startup process.	LCD and buzzer will be active for a few seconds and then complete off.	The battery voltage is too low	<ol style="list-style-type: none"> 1. Re-charge battery. 2. Replace battery.
No response after power ON.	No indication.	<ol style="list-style-type: none"> 1. The battery voltage is far too low. 2. Battery polarity is connected reversed. 	<ol style="list-style-type: none"> 1. Check if batteries and the wiring are connected well. 2. Re-charge battery. 3. Replace battery.
No Output voltage No Display	No Indication	Poor battery condition or battery connection loose, BMS Cut off	Use new battery or make proper connections, Charge battery
No Output Voltage	LCD Display	Excess heat, faulty internal component, Poor ventilation	Clean Ventilation or go to service center
Low Output Voltage	No Indication	Low battery voltage, Overloaded inverter	Charge Battery, Reduce Load, Inspect inverter Component
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD	Input protector is tripped or Fuse blown, Faulty automatic transfer switch, Inverter not detecting mains	Check if the AC breaker is tripped or the fuse blown and the AC wiring is connected well. Inspect the inverter's mains power detection circuitry and sensors. Repair or replace if needed
	No Indication	Insufficient quality of AC power. (Shore or Generator)	<ol style="list-style-type: none"> 1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if <p>The input voltage range setting is correct.</p>
When the unit is turned on, the internal relay is switched on and off repeatedly.	LCD display	Faulty internal relay, Loose or damaged wiring connections	Check if battery wires are connected well. faulty internal relay
	LCD display	Overload error. The inverter is overload 110% and time is up	Reduce the connected load by switching off some equipment.
	LCD display	Output short circuited.	Check if the wiring is connected well and remove abnormal load. Check output shortage
	LCD display	Internal temperature of the inverter component is over 100°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high. Return to repair
Buzzer beeps continuously	LCD Display	Battery Low or Too Low, Excess Heat, Overload	Charge Batt. Reduce Load, Clean Ventilation or replace fan if damage.
Abnormal Noise or Heating	LCD Display	Faulty internal components., Poor ventilation	Clean Ventilation or go to the service center, inspect the inverter component.
No Feedback	LCD Display	Transformer Continuity issue, Faulty internal component.	Call the Service Support.

Please note that this manual serves as a guide for using our product. In the event of any issues or concerns, we encourage you to reach out to our technical service department for assistance. Our team of professional engineers will provide expert guidance and support to resolve any problems you may encounter. Your satisfaction and the optimal performance of our products are our top priorities, and we are committed to ensuring that you receive the assistance you need

SERVICING

If you encounter a problem that troubleshooting doesn't resolve, please reach out to your authorized dealer for assistance. Provide them with details of the issue, including the serial number and installation date. This will ensure prompt attention from our authorized service team, minimizing any downtime you may experience. Your satisfaction and the swift resolution of any issues are our top priorities.

WARRANTY

LIGEN POWER retains the authority to modify designs and specifications without prior notice, and without any obligation to implement these changes on units already distributed. This allows us to continually improve our products to better meet the evolving needs of our customers, ensuring that they receive the most up-to-date and innovative solutions.

We provide a 6 year warranty on the lithium battery and a 1 year warranty on the inverter circuit. This means that if any defects occur within these time frames due to materials or workmanship issues under normal use, we will repair or replace the components accordingly. The warranty does not cover misuse, modifications, or normal wear and tear. Contact us for warranty claims or assistance.

GOING TO VACATIONS

Before leaving for vacation, it's important to follow these steps regarding your Inverter:

1. Turn the Inverter ON/OFF switch to the OFF position. This helps conserve energy and ensures the Inverter is not unnecessarily draining the battery while you're away.
2. Keep the mains input connected to the Inverter to ensure the battery remains charged at all times. This ensures that your Inverter is ready for use when you return and helps maintain its performance and longevity.

**Amossys Portable Power LLP, Room No:A & B, 1st Floor,
Incubation Centre, Block-IV, Indian Institute of Technology, Patna,
Amhara Road, BIHTA, 801106, Patna, Bihar**

Phone: +91-9031086083

E-mail: info@ligenpower.com

http: // www.ligenpower.com